

# GO-RACER SPEED POTENTIOMETER ADJUSTMENT

Print this off for easy reference




Undo the small grub screw with hex key provided (anti-clock wise).



Once the grub screw is loosened off, with a screwdriver, back the throttle potentiometer off anti-clock wise until it comes to a stop (be gentle).



Switch on the GO-Racer and with the rear wheels off the ground gently turn the throttle potentiometer clockwise until the wheels start to move, then back it off about 10 degrees anti-clockwise then tighten the grub screw firmly.

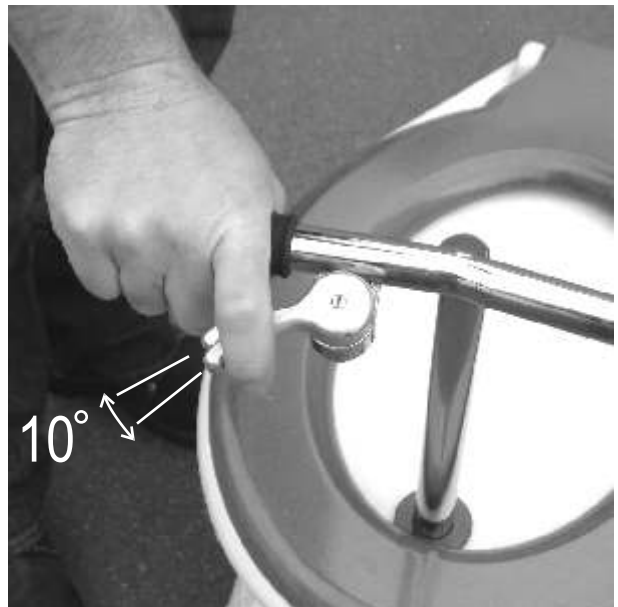

The throttle should have some free travel from rest to when the GO-Racer first starts to move (about 10 degrees). You can have more free travel but no less.